

Easy Mounting Instructions

Dart-Stop ScoreStation

Required Tools: Pencil, Drill, 5/32 or 3/16 inch Drill Bit*, Hammer, phillips-head Screwdriver

Suggested Tool: Carpenter's or Spirit Level

Mounting Steps

1. Choose a mounting location for your ScoreStation. See Note "1" below. Make two marks on the wall, one 7/8 inch below the top of the ScoreStation and a second mark 24-3/4 inches below the first mark. We recommend using a level to plumb these two marks.
2. Next, for drywall*, drill one 5/32 inch hole in the center of each mark made in the previous step. Hammer one plastic wall anchor (included) into each hole until the round flat top of the anchor is flush against the face of the wall. Note: the included wall anchors are suitable for drywall, plaster and masonry walls. * Harder materials will require 3/16" pilot holes.
3. Assemble the finish washers and screws (included.) Insert a screw through the top mounting hole. Fasten the ScoreStation to the wall by aligning the top screw with the top plastic wall anchor. Drive in the top screw until the scoreboard is tight against the wall. Use a level to check for plumb then drive in the lower screw. Be careful not to overtighten the screws. You're done!

Note: For purchasers of the ScoreStation backing as an upgrade for a Dart-Stop scoreboard-- use the enclosed five (5) brass machine screws to fasten your scoreboard to the backing.

Erasing & Cleaning Suggestions

Glossy White/ Dry-Erase

A dry towel removes marks easily. Glass cleaner may be used periodically as needed.

Glossy Black/ Wet-Erase

Glass cleaner (such as Windex) or rubbing alcohol is very effective to remove marks. Fill a small spray bottle for convenient application. A damp towel works well with slightly more effort.

Matte Black/ Chalk or Soapstone

A dry towel removes marks easily. Use a damp towel periodically to remove built-up residue.

To remove marks on fabric: Use a towel with water, glass cleaner or rubbing alcohol.

Notes/ Cautions

1. Locate the ScoreStation far enough away from your dartboard so that stray darts will not hit it. The metal surface may damage your darts or may be damaged by the darts.
2. Use caution when mounting the dartboard-- the metal edges may be sharp. The scoreboard is heavy-- watch your feet!
3. Metal objects can make permanent marks on the scoreboard. Use particular caution when marking on the Matte Black/ Chalk surface with the aluminum soapstone holder.

Questions? Call Dart-Stop Toll-Free at (877) 271-STOP [7867]

