



## Easy Mounting Instructions Glossy Black Scoreboard

### What's Included

Four of each—Wall Mounting Screws and Plastic Wall Anchors

### Required Tools

Hammer, Electric Drill, 1/8 or 7/32-inch Drill Bit [See Step 2 below to determine bit size based on your wall material], pencil or pen and a Phillips-head Screwdriver or Electric driver

### Suggested Tool

Carpenter's or Spirit Level

### Mounting Steps

1. Choose a mounting location for your scoreboard (SB) one that's far enough from the dartboard to avoid stray darts. Hold the scoreboard on the wall at the desired location [for best appearance, use a level to plumb the orientation.] While firmly holding the SB, mark the four hole locations using a pencil or pen [a helper may be useful to hold the SB or mark the holes.]
2. Determine the wall material then select the appropriate step below for that material.
  - a. *Drywall, concrete, plaster, ceramic or stone tile, and masonry:* drill one 7/32-inch hole at the center of each mark made in the previous step. Lightly hammer one plastic wall anchor into each hole until the round flat top of the anchor is flush with the face of the wall.
  - b. *Wood:* drill one 1/8-inch pilot hole at the center of each mark made in the previous step. The plastic wall anchors are not used. The wood should be at least 1/2-inch thick.
3. Being sure the scoreboard is oriented upright, align the holes of the SB with the anchors or holes in the wall from the prior step. While holding it firmly in place, tighten/drive\* one of the top screws until firm. Next insert and drive the other top screw. Complete the mounting by inserting and driving the two lower screws until firm. \* Use Caution to avoid overtightening the screws.

### Notes/ Cautions

- Dry or Wet-Erase markers may be used. For many marker types, you can erase the scoreboard dry. Before using markers, test in a small area to verify easy erasability.
- Erase with a soft towel such as cotton terry to minimize scratches. A damp cloth with water or glass cleaner may be required to erase marks, especially after extended drying time.
- Caution! The metal edges may be sharp.
- Verify your scoreboard is securely mounted to the wall prior to use. Check again periodically and re-mount as necessary to maintain secure wall mounting.

### Cleaning Recommendations

- To clean the scoreboard, use one of the following as required: soap and water, glass cleaner or isopropyl alcohol with a soft absorbent cloth.