

## Scoreboard Mounting Instructions

**Required Tools:** Pencil, Drill, 5/64" or 5/32" or 3/16" Drill Bit\*, Hammer, phillips Screwdriver  
**Suggested Tool:** Carpenter's or Spirit Level

### Mounting Steps

**1.** Choose a mounting location for your scoreboard. See Note "1" below. Firmly hold the scoreboard on the wall while marking inside each of the four (4) or five (5) brass eyelet mounting points (quantity of eyelets varies.) Press firmly on the middle of the scoreboard to remove any curvature in the metal. For additional accuracy, use a level to plumb the scoreboard.

**2.** Next, drill one hole at the center of each mark made in the previous step.

\*Drywall: 5/32"

\*Masonry, Plaster or Concrete: 3/16" (Masonry drill bit)

\*Wood: 5/64" (Wood does not require wall anchors)

For non-wood surfaces, hammer one plastic wall anchor (included) into each hole until the round flat top of the anchor is flush against the face of the wall.

**3.** Fasten the scoreboard to the wall: Align the mounting holes with the centers of the wall anchors or pilot holes. Drive one brass screw (included) through each of the eyelets into the anchors or pilot holes until the scoreboard is tight against the wall. Do not overtighten the screws.

### Scoreboard Cleaning

#### Glossy White/ Dry-Erase

Glass cleaner may be used periodically as needed.

#### Glossy Black/ Wet-Erase

Glass cleaner or rubbing alcohol may be used to remove built-up marker residue. Fill a small spray bottle for convenient application. A damp towel works well with slightly more effort. The white marker requires "activation" prior to use; *see instructions on marker*.

#### Matte Black/ Chalk or Soapstone

Use a damp towel periodically to remove built-up residue.

### Notes & Cautions

**1.** Locate the scoreboard far enough away from your dartboard so that stray darts will not hit it. The metal surface may damage your darts or may be damaged by the darts.

**2.** Use caution when mounting the dartboard-- the metal edges may be sharp. Handle carefully to prevent dropping.

**3.** Metal objects can make permanent marks on the scoreboard. Use particular caution when marking on the Matte Black/ Chalk surface with the aluminum soapstone holder.

Questions? Call Dart-Stop Toll-Free at (877) 271-STOP [7867]

